

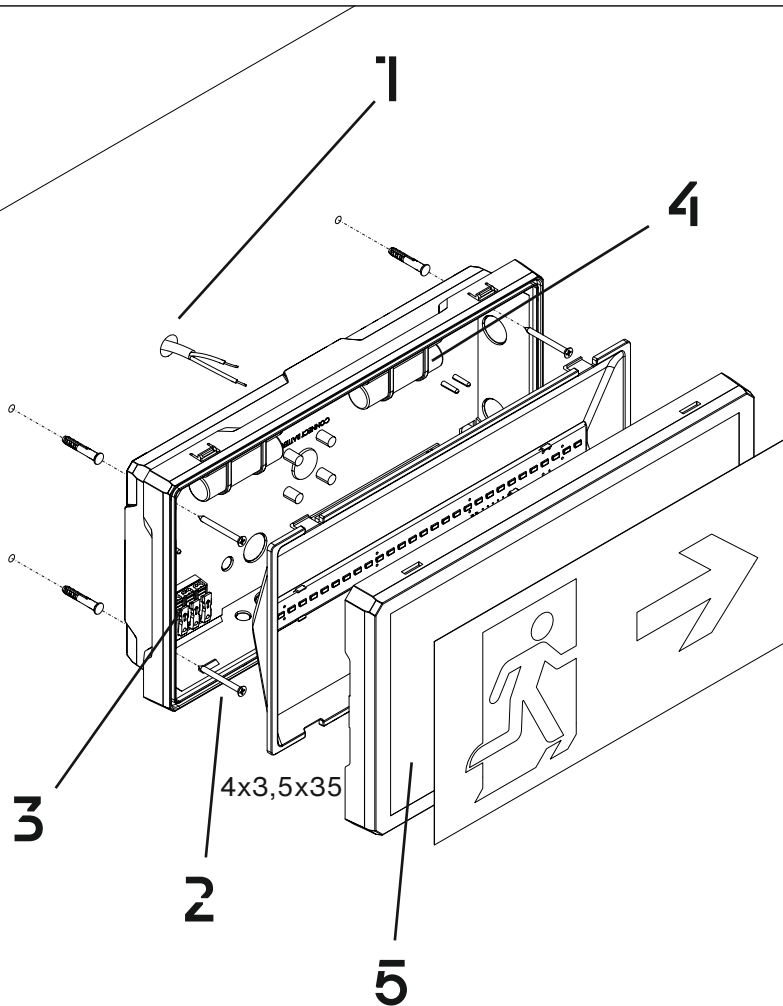
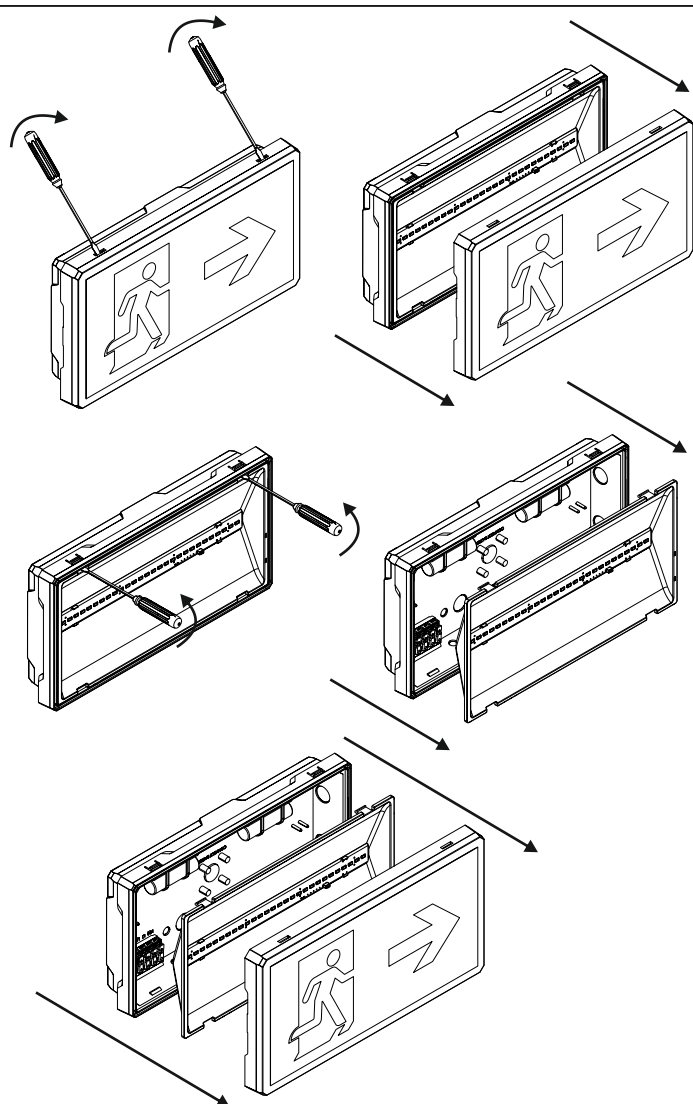
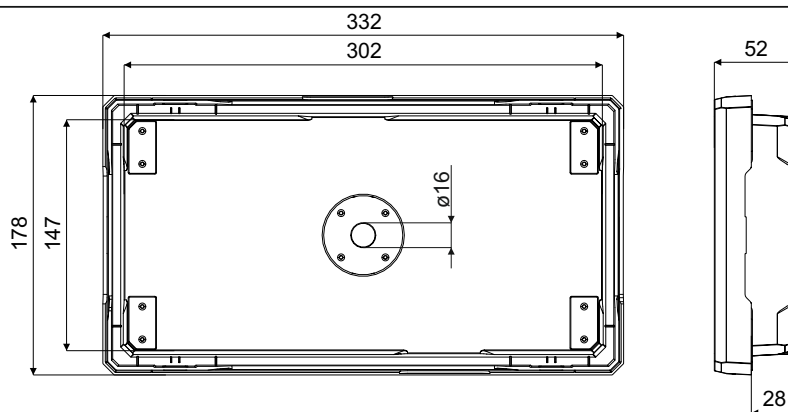
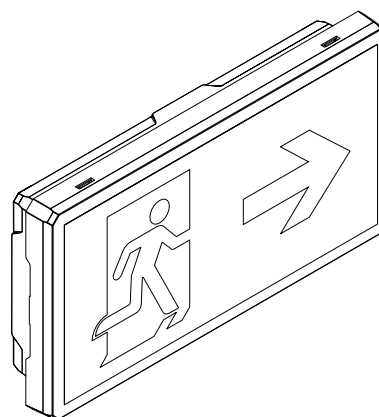


EXIT L
ETL


INSTRUKCJA MONTAŻU
ASSEMBLY INSTRUCTIONS
INSTALLATIONSANWEISUNGEN
INSTRUCTIONS D'INSTALLATION
INSTRUCCIONES DE INSTALACIÓN
ISTRUZIONI PER L'INSTALLAZIONE

ONS[®]







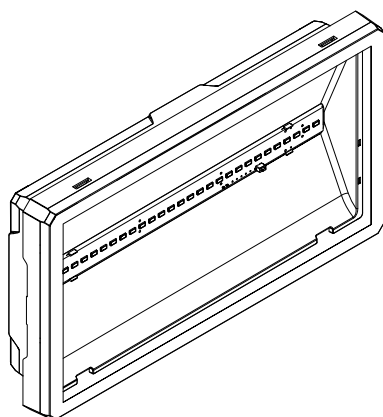


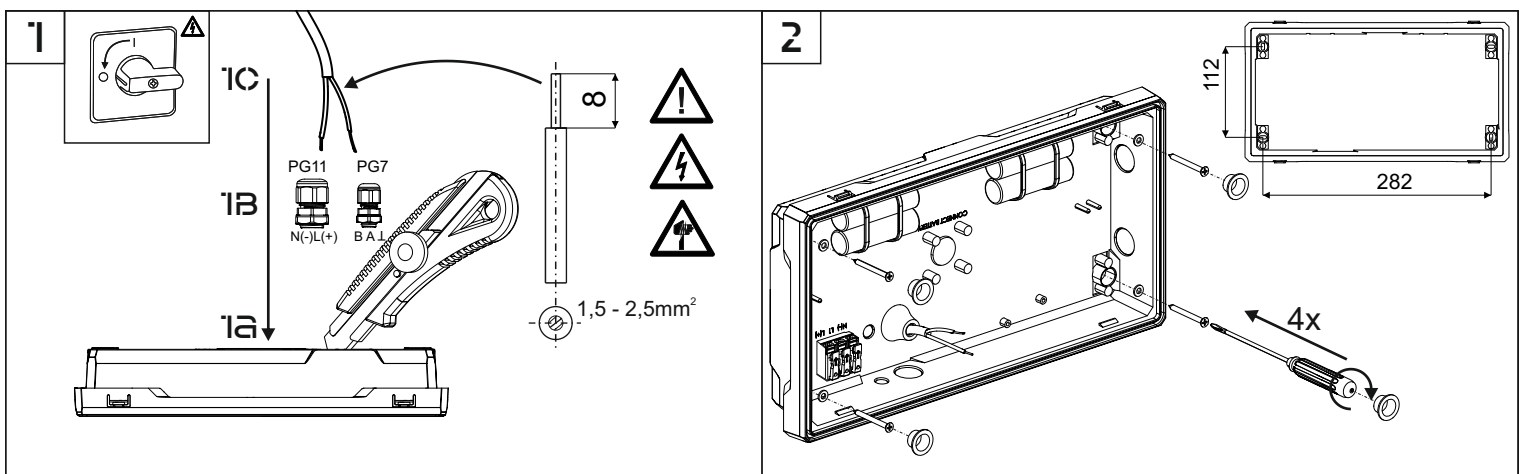

3 3a- SELF-CONTAINED, DALI,
3b- CBS, 3c- CBS-E,
3d- FZLV, FZLV II, 3e- RU, RW, RW2

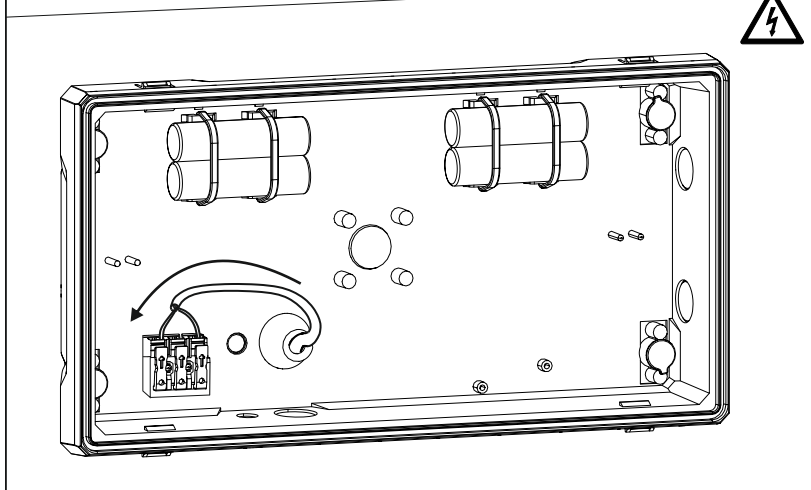

4 SELF-CONTAINED, DALI, RU, RW, RW2

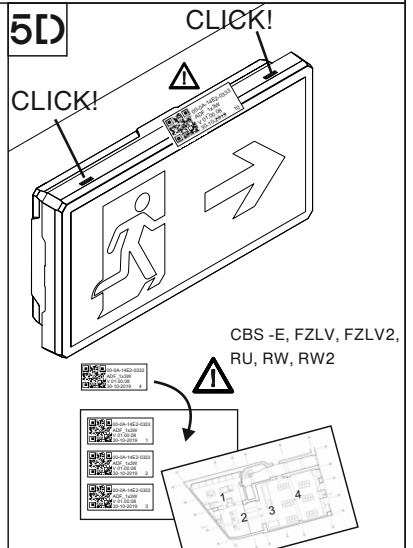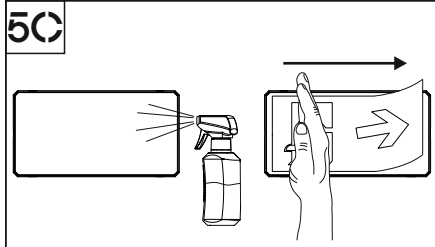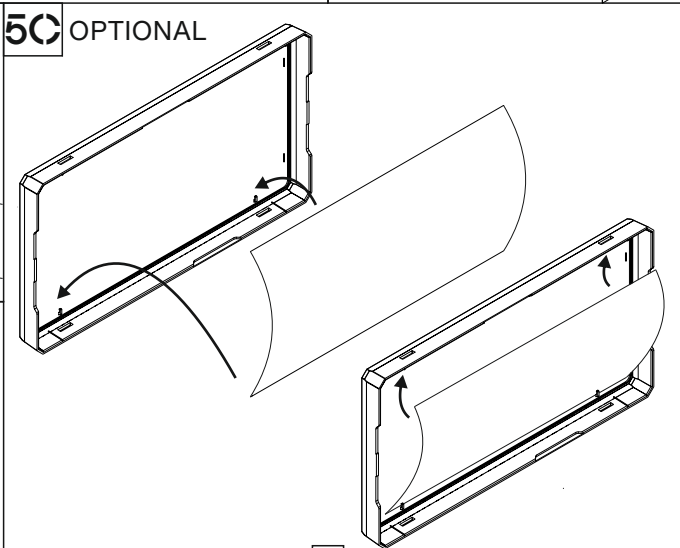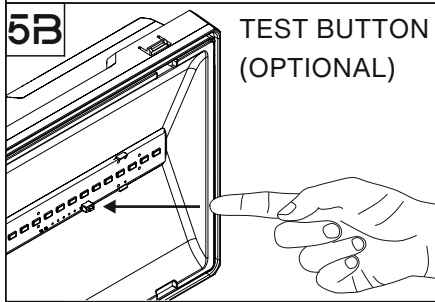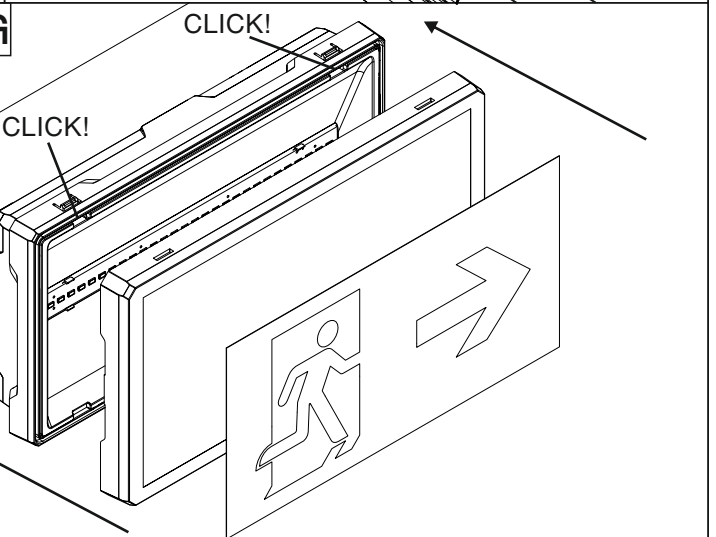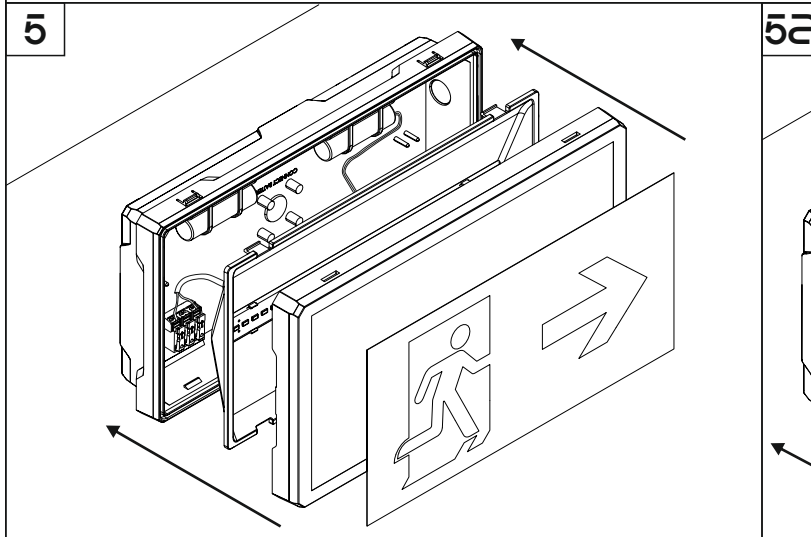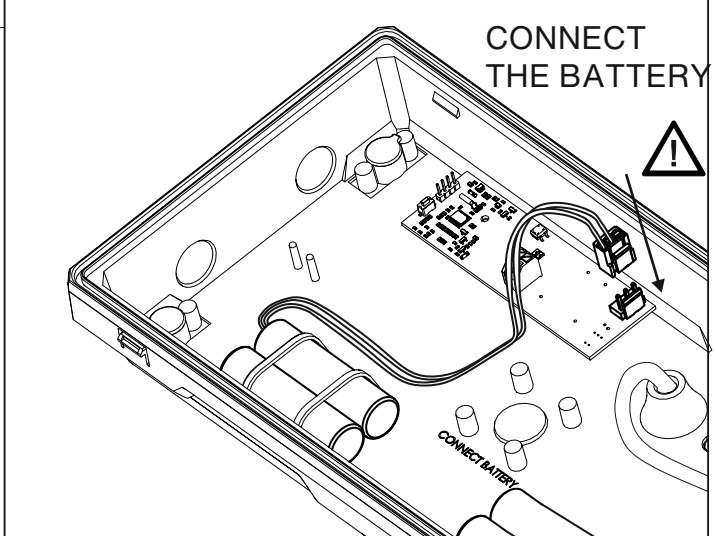


3A SELF-CONTAINED, DALI


CONNECT THE BATTERY





220÷240VAC, 50/60Hz

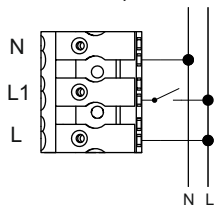

220÷240VAC, 50/60Hz

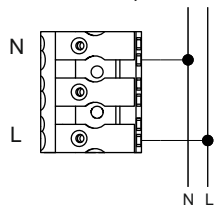



DALI

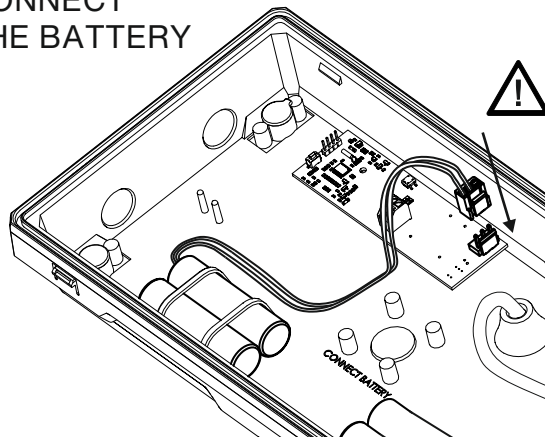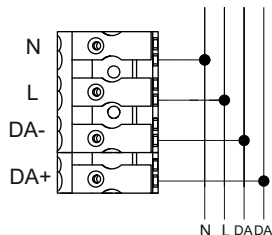


3B CBS



220÷240VAC, 50/60Hz
176÷275VDC

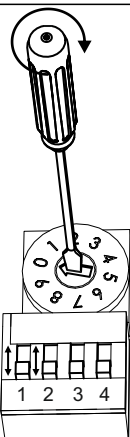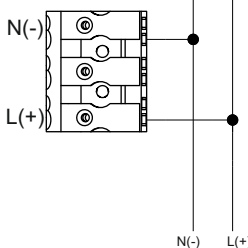



Example,
address number 12

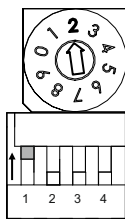


3C CBS- E




220÷240VAC, 50/60Hz
176÷275VDC

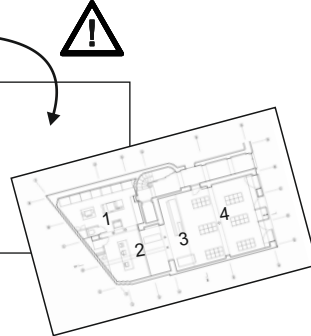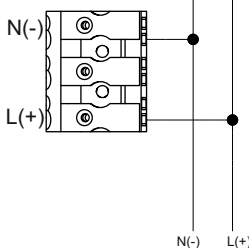



3D FZLV, FZLV II

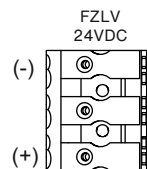

(-) (+)

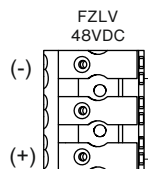


(-) (+)

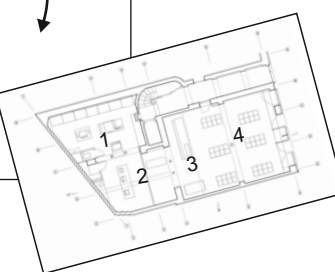 


3E RU, RW, RW2




RU, RW, RW2:
220÷240VAC, 50/60Hz

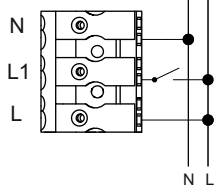


RU, RW, RW2:
220÷240VAC, 50/60Hz

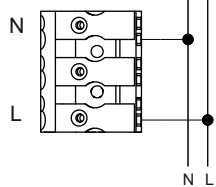


RU:
BUS

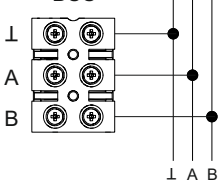



CONNECT THE BATTERY

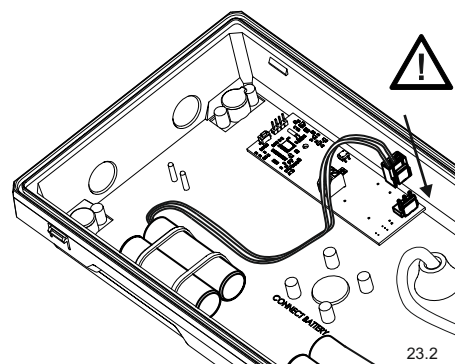

ETS/RS,RU

 


ETS/CB

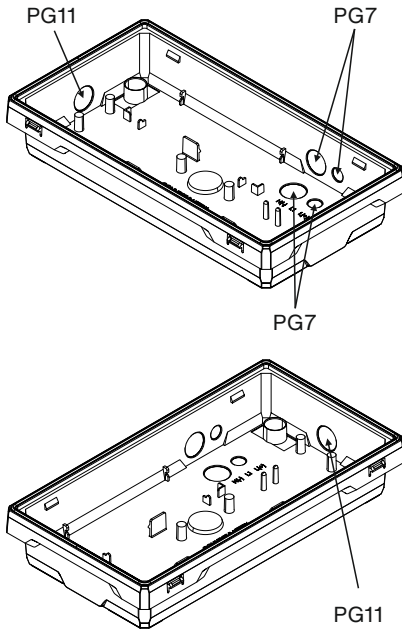 


ETE/RS,RU





ETE/CB

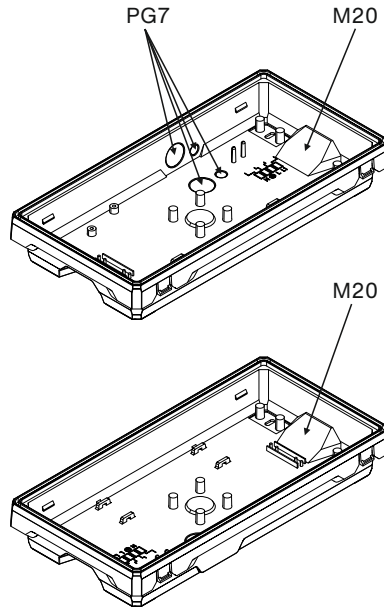


ETL/RS,RU

 


ETL/CB

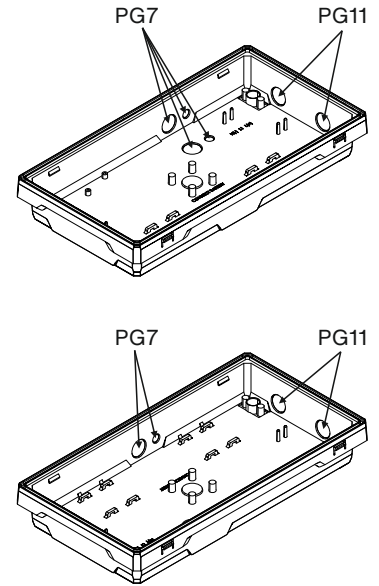 


1

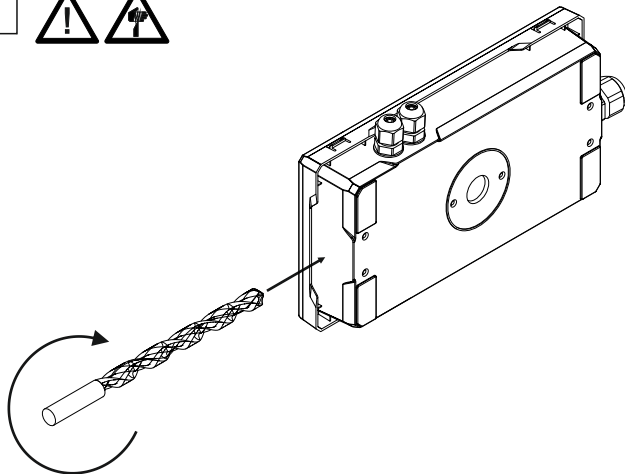


2a

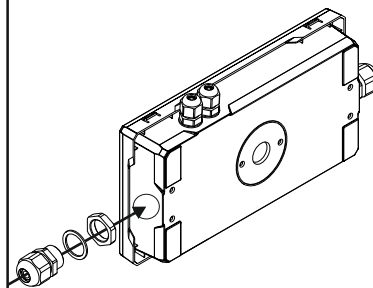


2B

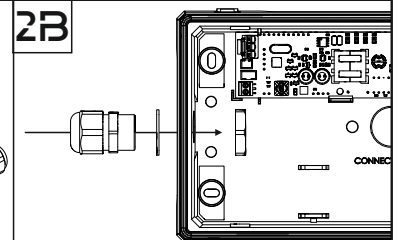


2C

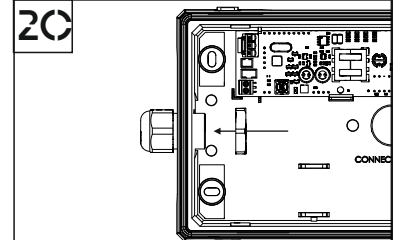


3a

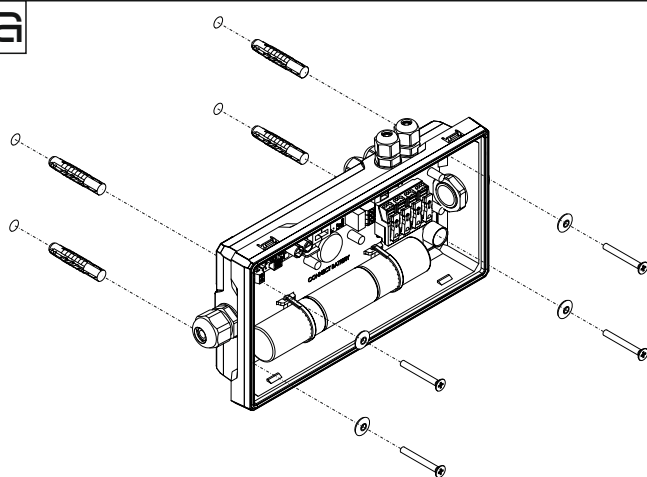


3B

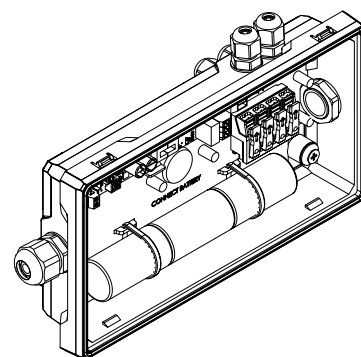


4a 

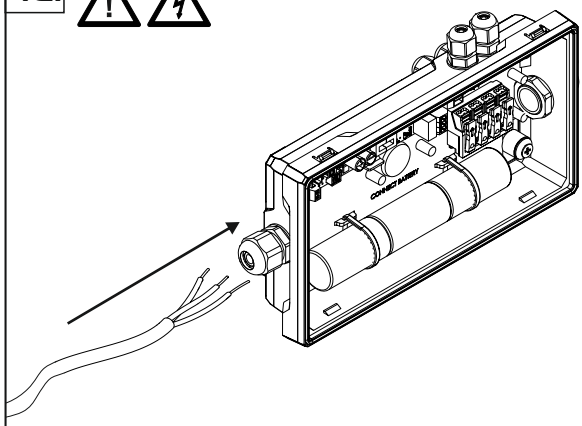


4B

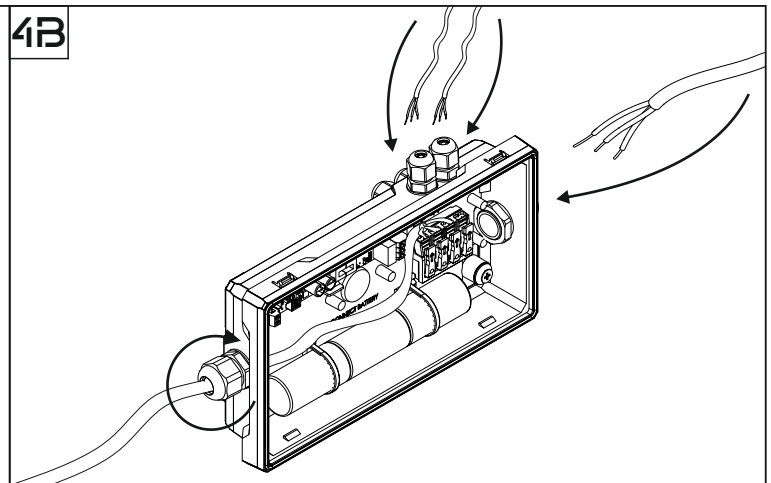


5a

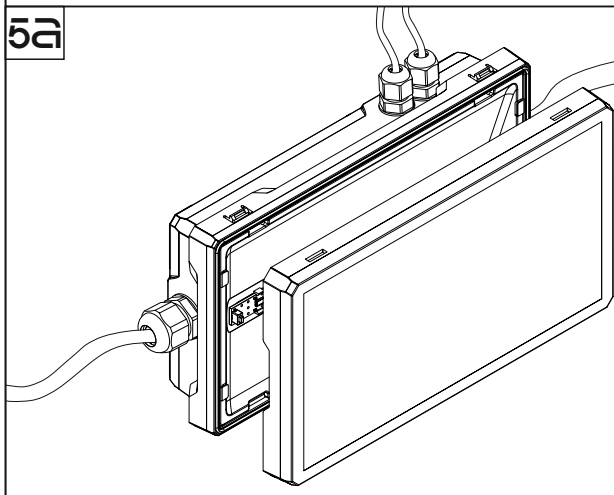


5B

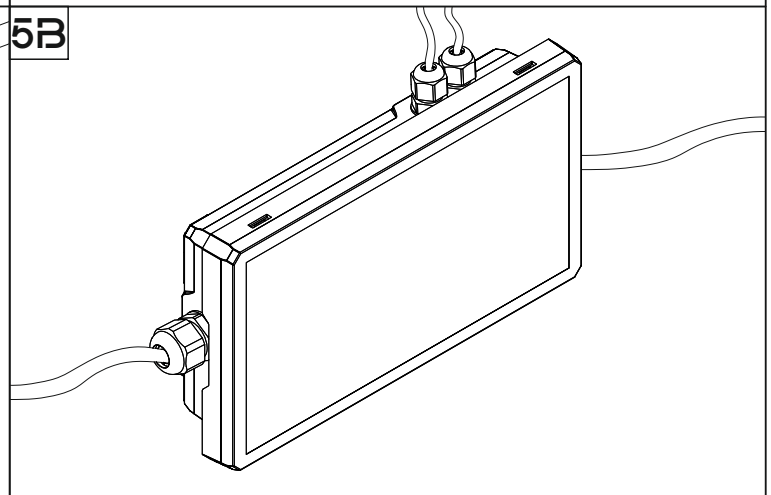

ETS

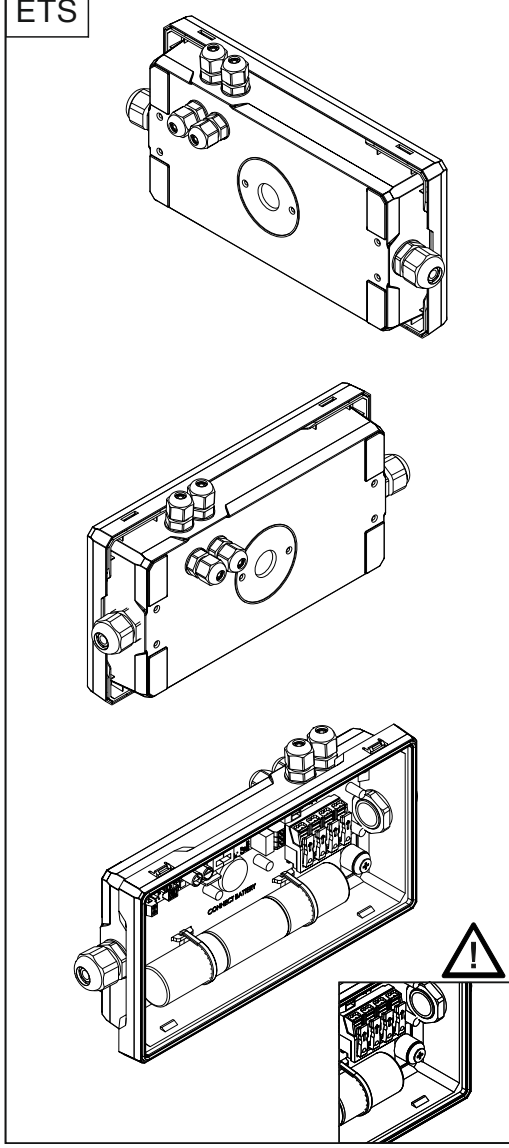

ETE

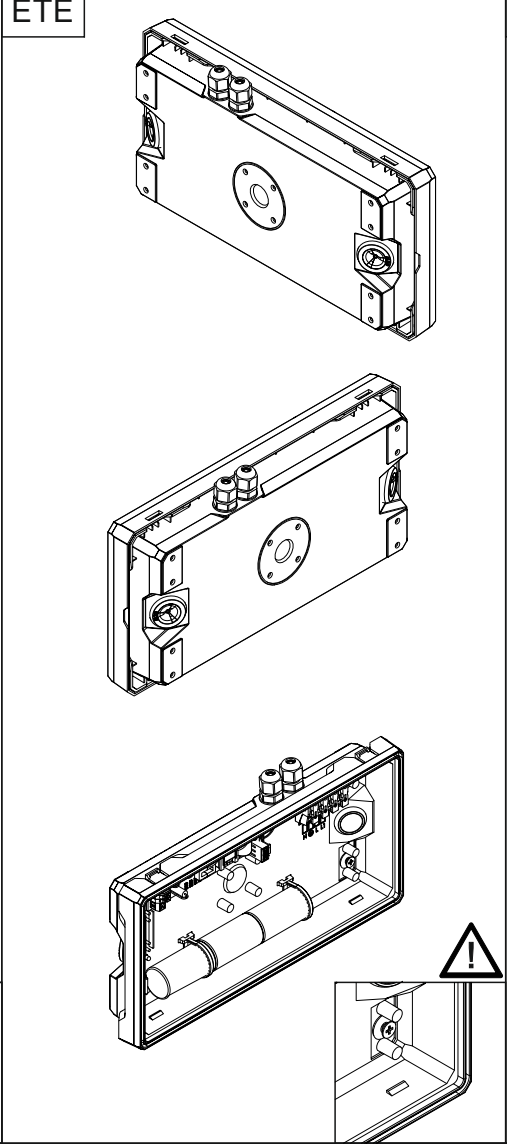

ETL

